

## IMPORTANT REMARKS



Prior to proceeding with installation, it is essential the instructions be read in full, since they contain important information regarding safety, installation, use and maintenance.

### AUTOMATION MUST BE IMPLEMENTED IN COMPLIANCE WITH THE EUROPEAN REGULATIONS IN FORCE:

EN 60204-1, EN 12445, EN 12453, EN 13241-1, EN 12635

- The installer must provide for a device (es. magnetothermal switch) ensuring the omnipolar sectioning of the equipment from the power supply. The standards require a separation of the contacts of at least 3 mm in each pole (EN 60335-1).
- The plastic case has an IP44 insulation; to connect flexible or rigid pipes, use pipefittings having the same insulation level.
- Installation requires mechanical and electrical skills, therefore it shall be carried out by qualified personnel only, who can issue the Compliance Certificate concerning the whole installation (Machine Directive 2006/42/CEE, Annex IIA).
- Also the automation upstream electric system shall comply with the laws and rules in force and be carried out workmanlike.
- We recommend to make use of an emergency button, to be installed by the automation (connected to the control unit STOP input) so that the gate may be immediately stopped in case of danger.
- For correct installation of the system, we recommend following the instructions issued by UNAC very carefully, which can be consulted at the following web site: [www.v2home.com](http://www.v2home.com)
- This instruction manual is only for qualified technicians, who specialize in installations and automations.
- The contents of this instruction manual do not concern the end user.
- Every programming and/or every maintenance service should be done only by qualified technicians.
- Anything not expressly described in these instructions is prohibited; unforeseen uses may be a source of danger to people and property.
- Do not install the product in explosive environments and atmospheres: the presence of inflammable gases or fumes is a serious safety hazard.
- Do not make any modifications to any part of the automation device, or the accessories connected to it, unless described in this manual.
- Any other modifications will void the warranty on the product.
- The installation steps should be conducted so as to avoid rainy weather, which can expose electronic circuits to dangerous water seepage.
- All operations requiring the casing of the device to be opened should be performed with the control unit disconnected from the electricity supply and with a warning notice displayed, for example: "CAUTION, MAINTENANCE IN PROGRESS".
- Avoid exposing the device close to sources of heat and flame.

- In the event of interventions on automatic or differential breakers or fuses, it is essential that faults be identified and resolved prior to resetting. In the case of faults that cannot be resolved using the information to be found in this manual, consult the V2 customer assistance service.
- V2 declines all responsibility for failure to comply with good construction practice standards in addition to structural deformation of the gate that might occur during use.
- V2 reserves the right to make modifications to the product without prior warning.
- Installation/maintenance personnel should wear individual protection devices (IPDs), such as overalls, safety helmets, boots and gloves.
- The ambient operating temperature should be that indicated in the technical characteristics table.
- The automation device should be shut down immediately in the event of any anomalous or hazardous situation; the fault or malfunction should be immediately reported to the person responsible.
- All safety and hazard warnings on the machinery and equipment should be complied with.
- Electromechanical actuators for gates are not intended to be used by people (including children) with diminished physical, sensory or mental capacity, or lacking in experience or knowledge, unless they are under supervision or have been instructed in use of the actuator by a person responsible for safety.

**V2 has the right to modify the product without previous notice; it also declines any responsibility to damage or injury to people or things caused by improper use or wrong installation.**



## DISPOSAL OF THE PRODUCT

As for the installation operations, even at the end of this product's life span, the dismantling operations must be carried out by qualified experts.

This product is made up of various types of materials: some can be recycled while others need to be disposed of. Find out about the recycling or disposal systems envisaged by your local regulations for this product category.

**Important!** – Parts of the product could contain pollutants or hazardous substances which, if released into the environment, could cause harmful effects to the environment itself as well as to human health.

As indicated by the symbol opposite, throwing away this product as domestic waste is strictly forbidden. So dispose of it as differentiated waste, in accordance with your local regulations, or return the product to the retailer when you purchase a new equivalent product.

**Important!** – the local applicable regulations may envisage heavy sanctions in the event of illegal disposal of this product.

## PRELIMINARY CHECKS AND IDENTIFICATION OF THE TYPE TO BE USED

The automation device should not be used until installation, as specified in "Testing and start-up", has been performed. It should be remembered that the device does not compensate for defects caused by improper installation, or poor maintenance, thus, prior to proceeding with installation, ensure that the structure is suitable and meets current standards and, if necessary, perform any structural modifications aimed at the implementation of safety gaps and the protection or segregation of all crushing, shearing and transit zones, and verify that:

- The gate has no friction points, either during closing or opening.
- The gate is well balanced, i.e. there is no tendency to move spontaneously when stopped in any position.
- The position identified for fixing the motor reducer allows easy and safe manual manoeuvring, compatible with the size of the motor reducer itself.
- The support on which the automation device will be fixed is solid and durable.
- The mains power supply to which the automation device is connected has a dedicated safety earthing system and differential breaker with tripping current less than or equal to 30 mA (the breaker gap distance should be greater than or equal to 3 mm).

**Warning: The minimum safety level depends on the type of use; please refer to the following outline:**

Type of activation commands	Closure use type		
	Group 1 Informed people (use in private area)	Group 2 Informed people (use in public area)	Group 3 Informed people (unlimited use)
Man-present command	A	B	Not possible
Remote control and closure in view (e.g. infrared)	C or E	C or E	C and D or E
Remote control and closure not in view (e.g. radio)	C or E	C and D or E	C and D or E
Automatic control (e.g. timed closure control)	C and D or E	C and D or E	C and D or E

**Group 1** – Only a limited number of people are authorised for use, and closure is not in a public area. Examples of this type are gates inside business premises, where the sole users are employees, or a part of them who have been suitably informed.

**Group 2** – Only a limited number of people are authorised for use, but in this case, closure is in a public area. An example of this may be a company gate that accesses onto a public street, and which is only used by employees.

**Group 3** – Anyone can use the automated closure, which is thus located on public land. For example the access gate to a supermarket or an office, or a hospital.

**Protection A** – Closure is activated by means of a control button with the person present, i.e. with maintained action.

**Protection B** – With the person present, closure is activated by a command controlled by means of a key-switch or the like, in order to prevent use by unauthorised persons.

**Protection C** – Restricts the force of the leaf of the door or gate. I.e., in the case of the gate striking an obstacle, the impact force must fall within a curve established by the regulations.

**Protection D** – Devices, such as photocells, capable of detecting the presence of people or obstacles. They may be active on just one side or on both sides of the door or gate.

**Protection E** – Sensitive devices, such as footboards or immaterial barriers, capable of detecting the presence of a person, and installed in such a way that the latter cannot be struck in any way by a moving leaf or panel. These devices should be active within the entire "danger zone" of the gate. The Machinery Directive defines "Danger Zone" as any zone surrounding and/or near machinery where the presence of an exposed person constitutes a risk to the health and safety of that person.

**The risk analysis should take into consideration all danger zones for the automation device, which should be appropriately protected and marked.**

**In a clearly visible area, apply a sign with information identifying the motorised door or gate.**

**The installer should provide the user with all the information relating to automatic operation, emergency opening and maintenance of the motorised door or gate.**

## TECHNICAL ASSISTANCE SERVICE

For any installation problem please contact our Customer Service at the number +39-0172.812411 operating Monday to Friday from 8:30 to 12:30 and from 14:00 to 18:00.

# EC DECLARATION OF INCORPORATION FOR PARTLY COMPLETED MACHINERY

(Directive 2006/42/EC, Annex II-B)

The manufacturer (\*) **V2 S.p.A.**, headquarters in **Corso Principi di Piemonte 65, 12035, Racconigi (CN), Italy**

Under its sole responsibility hereby declares that:

the partly completed machinery model(s):

CALYPSO400-230V (\*), CALYPSO500-230V (\*)

CALYPSO400-120V (\*), CALYPSO500-120V (\*)

Identification number and year of manufacturing: **typed on nameplate**

Description: **electromechanical actuator for gates**

- is intended to be installed on **gates**, to create a machine according to the provisions of the Directive 2006/42/EC. The machinery must not be put into service until the final machinery into which it has to be incorporated has been declared in conformity with the provisions of the Directive 2006/42/EC and 89/106/CE.
- is compliant with the applicable essential safety requirements of the following Directives:  
Machinery Directive 2006/42/EC (annex I, chapter 1)  
Low Voltage Directive 2006/95/EC.  
Electromagnetic Compatibility Directive 2004/108/EC.

The relevant technical documentation is available at the national authorities' request after justifiable request to: **V2 S.p.A., Corso Principi di Piemonte 65, 12035, Racconigi (CN), Italy**

The person empowered to draw up the declaration and to provide the technical documentation:

**Cosimo De Falco**

Legal representative of V2 S.p.A.

Racconigi, 11th January 2010




(\*) made in extra EU Countries on behalf of V2 S.p.A.

## TECHNICAL DATA

		Calypso400	Calypso500	Calypso 400-120V	Calypso 500-120V
Max. leaf length	m	2,5	3	2,5	3
Max. leaf weight	Kg	400	500	400	500
Power supply	VAC - Hz	230 - 50	230 - 50	120 - 60	120 - 60
Idling current	A	0,8	0,8	2	2
Full load current	A	1	1	2,8	2,8
Maximum Power	W	200	200	300	300
Capacitor	µF	8	8	25	25
Max travel	mm	400	500	400	500
Operating speed	m/s	0,016	0,016	0,018	0,018
Maximum thrust	N	2300	2300	2300	2300
Working temperature	°C	-30 ÷ +50	-30 ÷ +50	-30 ÷ +50	-30 ÷ +50
Protection	IP	44	44	44	44
Working cycle	%	30	30	30	30
Motor weight	Kg	6,5	6,8	6,5	6,8

## INSTALLATION LAYOUT

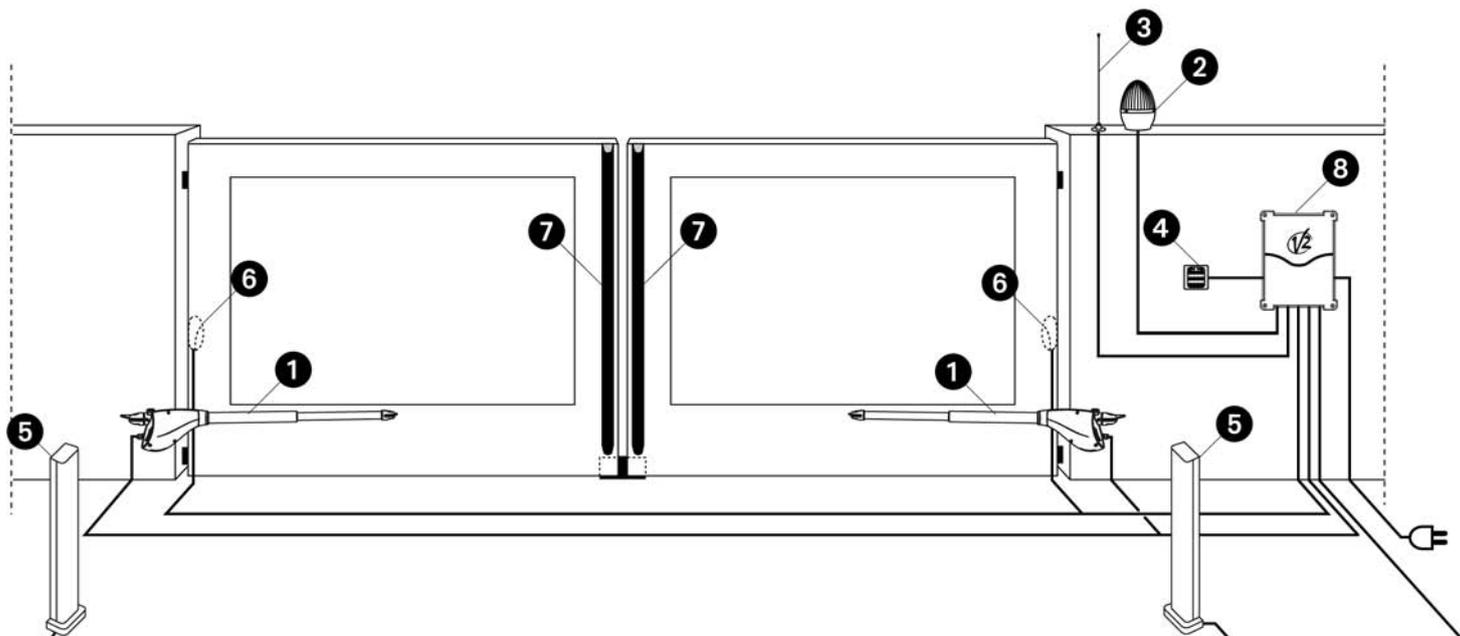


1 CALYPSO actuator	cable 4 x 1 mm <sup>2</sup>
2 Blinker	cable 2 x 1,5 mm <sup>2</sup>
3 Aerial	cable RG-58
4 Key or digital selector	cable 2 x 1 mm <sup>2</sup>

5 Internal photocells	cable 4 x 1 mm <sup>2</sup> (RX) cable 2 x 1 mm <sup>2</sup> (TX)
6 External photocells	cable 4 x 1 mm <sup>2</sup> (RX) cable 2 x 1 mm <sup>2</sup> (TX)
7 Safety edge (EN 12978)	-
8 Control unit	cable 3 x 1,5 mm <sup>2</sup>

### PREPARATORY STEPS

The new series of actuators CALYPSO, has been devised to serve gates up to 500 Kg with leaf up to 3 meters wide (look at the table technical data). Before proceeding with the installation, please make sure that your gate opens and closes freely, and that:

- Hinges and pins are in optimum condition and properly greased.
- No obstacles are within the moving area.
- There is no friction with the ground or between the leaves.
- Your gate shall be equipped with central **A** and side **B** stops, which are fundamental for the good system operation.

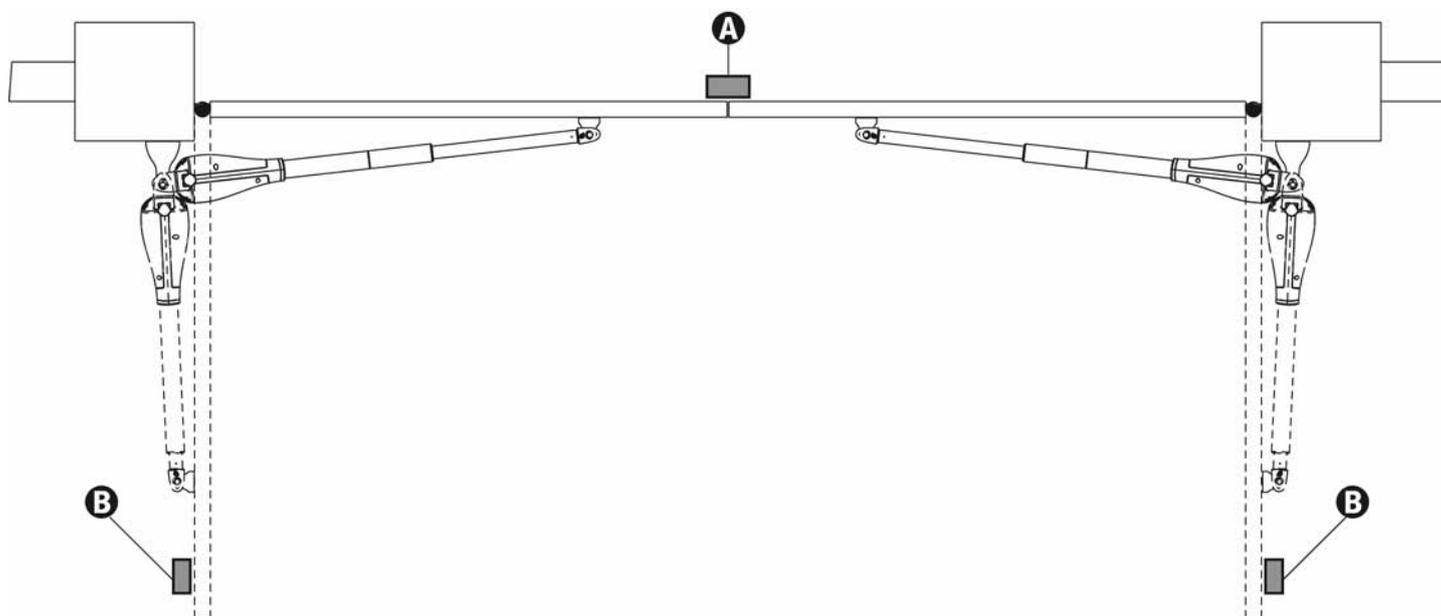


## INSTALLATION MEASURES

To carry out a proper installation of the operator parts as well as to ensure the best automation performance, the measurement levels shown in the following table shall be complied with. Change the gate structure to adapt it to one of the cases in the table, if necessary.

**⚠ WARNING:** In the case of leaf longer than 2 metres, an electric lock must be fitted to ensure an efficient closing.

### INWARD OPENING

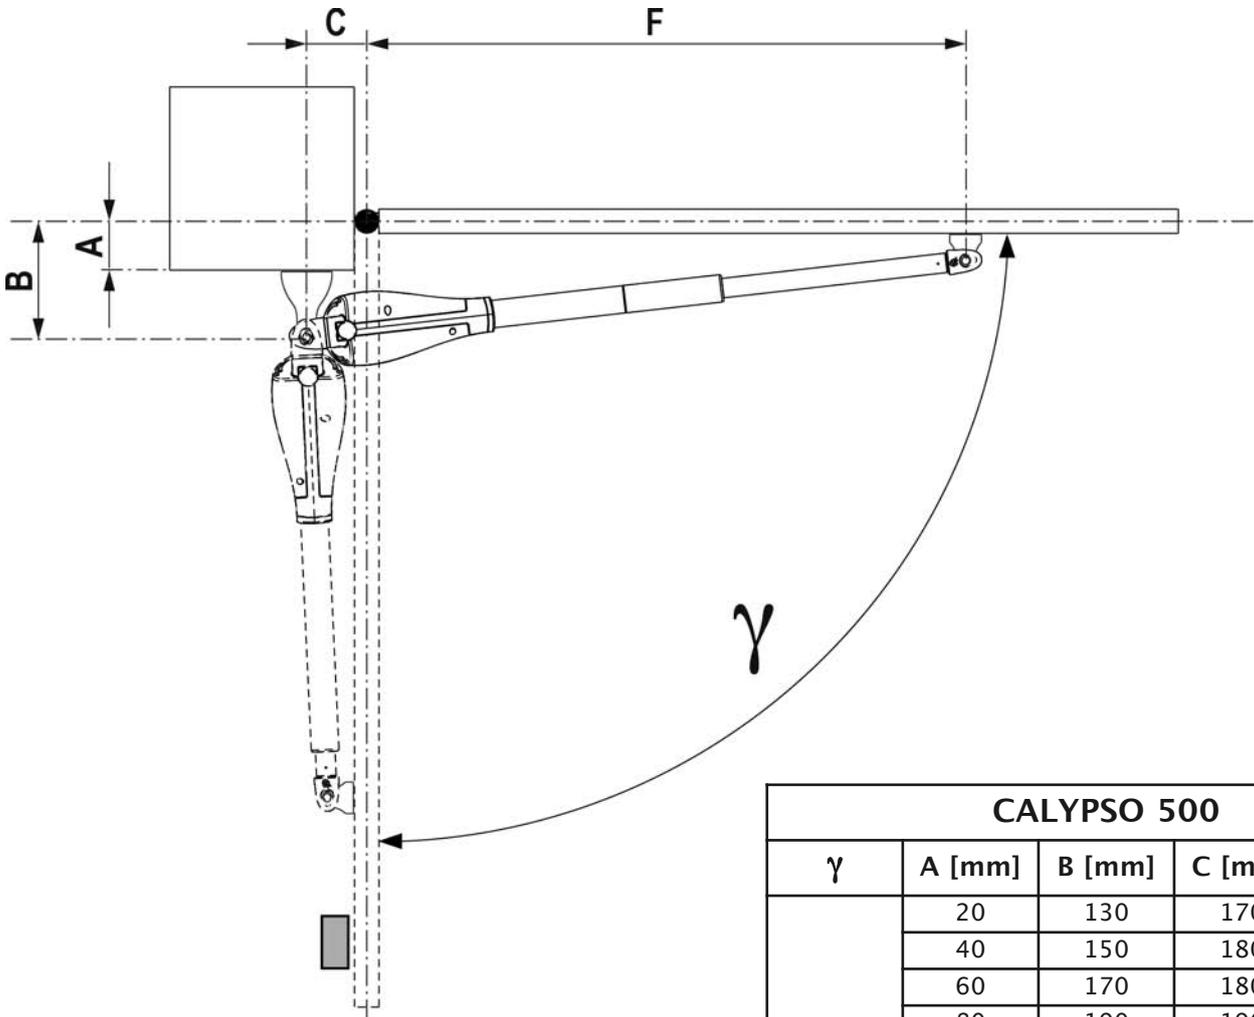


CALYPSO 400				
$\gamma$	A [mm]	B [mm]	C [mm]	F [mm]
90°	20	130	130	1010
	40	150	140	1000
	60	170	150	990
	80	190	150	980
	100	200	150	980
	120	210	140	980
	140	250	120	1010
	100°	20	130	170
40		150	180	960
60		170	180	960
80		190	170	970
100		210	140	990
110°	20	130	190	950
	40	150	180	960
	50	160	170	970

CALYPSO 500				
$\gamma$	A [mm]	B [mm]	C [mm]	F [mm]
90°	20	130	170	1200
	40	150	180	1190
	60	170	180	1190
	80	190	190	1180
	100	210	190	1170
	120	230	190	1170
	140	250	180	1170
	160	270	190	1170
	180	290	170	1180
100°	20	130	160	1210
	40	150	170	1200
	60	170	170	1200
	80	200	180	1190
	100	210	170	1190
	120	230	190	1170
	140	250	180	1180
	160	270	160	1200
	170	280	160	1200
110°	20	130	170	1200
	40	150	180	1190
	60	170	180	1190
	80	190	190	1180
	110	220	200	1170

**OUTWARD OPENING**

ENGLISH

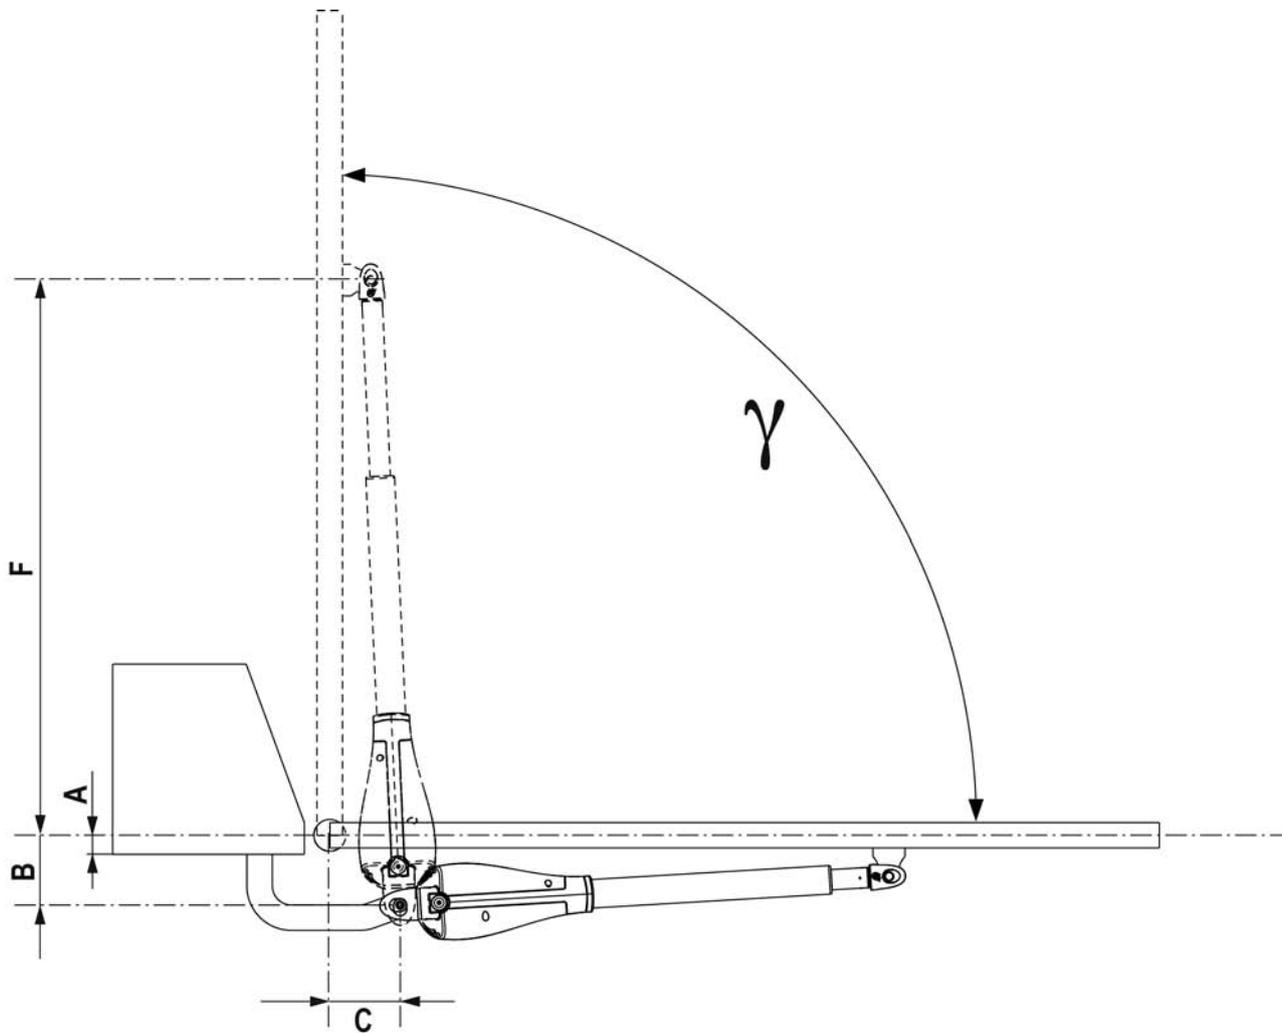


**CALYPSO 400**

$\gamma$	A [mm]	B [mm]	C [mm]	F [mm]
80°	30	110 ÷ 130	90	949
85°	30	110 ÷ 130	100	967
90°	30	110 ÷ 130	110	986
95°	30	110 ÷ 130	120	1006
100°	30	110 ÷ 130	130	1027
110°	30	110 ÷ 130	140	1057

**CALYPSO 500**

$\gamma$	A [mm]	B [mm]	C [mm]	F [mm]
80°	30	130	100	995
85°	30	130	110	1005
90°	30	130	120	1015
95°	30	130	130	1025
100°	30	130	140	1035
110°	30	130	150	1045

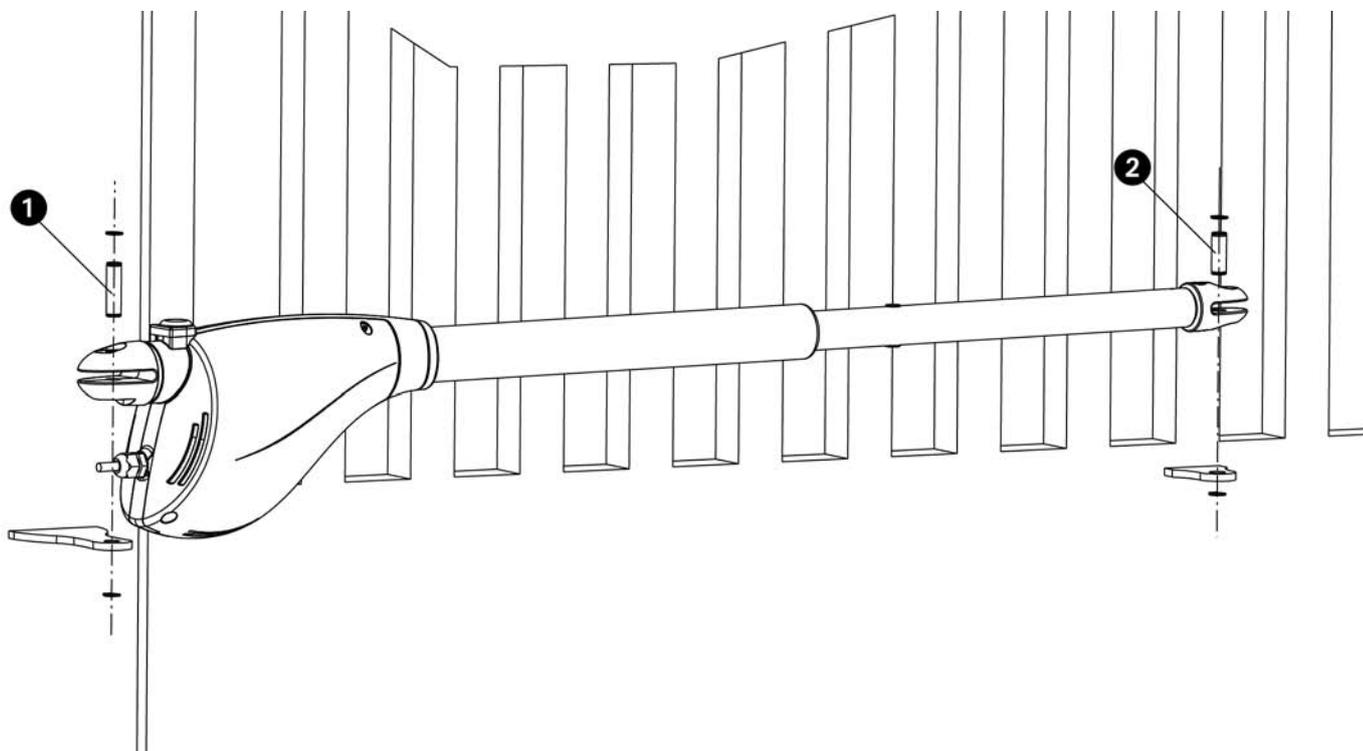



## ACTUATOR FIXING


Choose measures referring to the table you can find in the previous page, mark them on the pillars and continue as follows:

- Fix the clamps to the pillar and to the gate soldering directly; if the material does not allow it, it is necessary to solder the clamps to plates to be fixed to the gate and the pillars by screws.
- Close the swing.
- Unlock the actuators.
- Position CALYPSO on the brackets and fix the pins no. 1 and no. 2 with seeger (see the picture).
- Open and close the swings repeatedly manually to verify the absence of frictions between gate and ground.

**⚠ WARNING: in order to avoid damage to the actuator, please adhere to the following conditions:**

- The brackets must be installed at the same height.
- The maximum stroke of arm A should not exceed 456 mm for CALYPSO400 and 556 mm for CALYPSO500 (in case of gate completely closed).
- The minimum stroke of arm B must be more than 56 mm (in case of gate completely open).

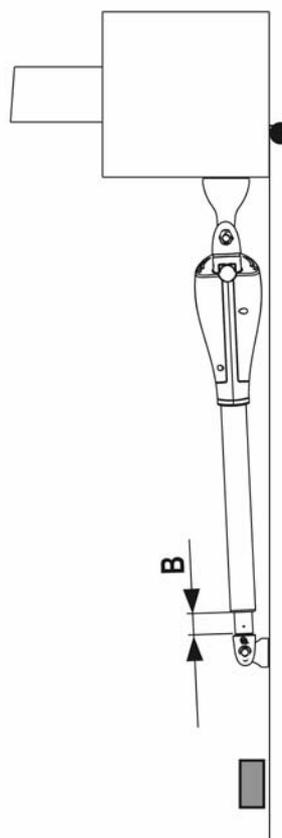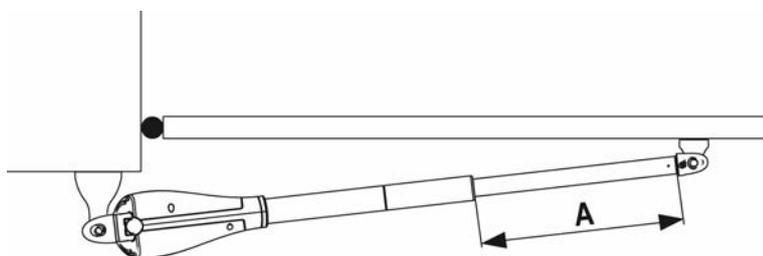

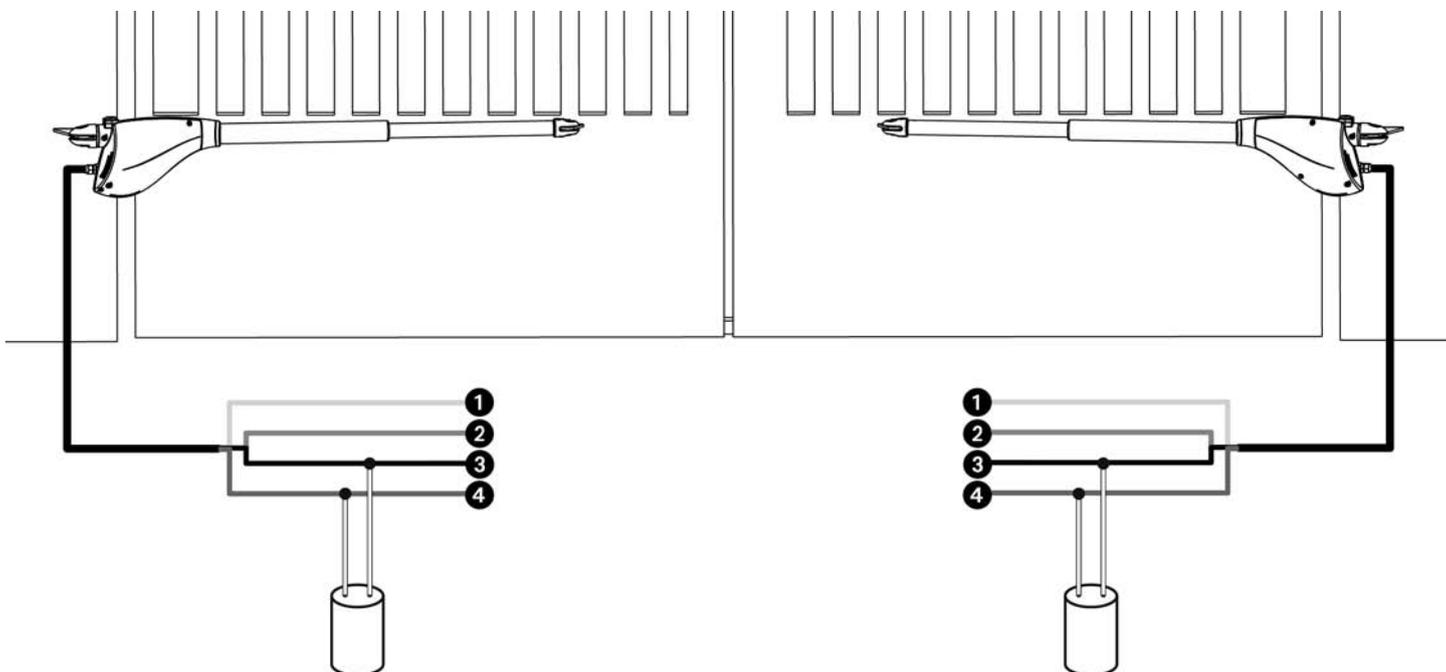

### ELECTRICAL CONNECTIONS

	230V	120V	FUNCTION
①	YELLOW - GREEN	GREEN	GND
②	GREY	WHITE	COMMON
③	BLACK	BLACK	CLOSING
④	BROWN	RED	OPENING

**⚠ WARNING:** always remember to connect the earth according to current standards (EN 60335-1, EN 60204-1).

**Avoid tension in the cable during open and close operations.**

### EMERGENCY RELEASE

In case of a blackout, the gate can be operated directly from the motor. Insert the key supplied in the lock, perform 1/2 of a turn.

To restore the automation, simply rotate the key in closed position and insert the provided plastic cover onto the lock.

